

NavMate Map/Software Update Instructions for SD Memory Card Devices

For Windows machine only.

NavMate Installation Instructions for SD cards:

Instructions for SD cards:

1. Place the SD card from your Navigation system into your Computer
2. Please note the Drive letter assigned to the SD card. < D,E,F>
Insert the DVD into your computer
You will see the **Navigation Software Utility** screen first
3. Click on **Map/Voice Uploader**
The **NavMate** Map Down loader will come up
4. Change the **Destination** to the Drive letter of the SD card <D,E, F>
5. Select the voice(s) from "Language" list.
You may select more than one to load.
6. Click on **GO**
7. Now a Delete window will pop up.
Click **OK** The Software will now load your SD card with new maps and software.
8. It is finished when a window pops up **Download Complete**
9. Click **OK** and Close all the windows.

***** See SD Removal instructions*****







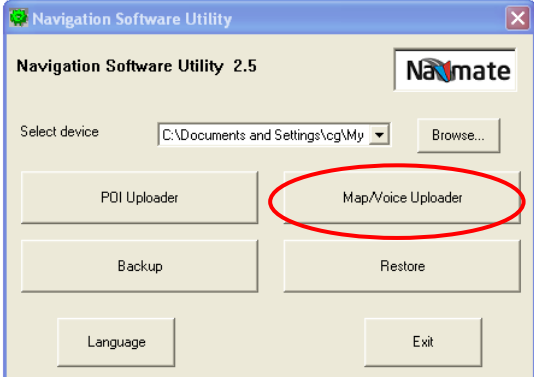
****SD card Removal:****

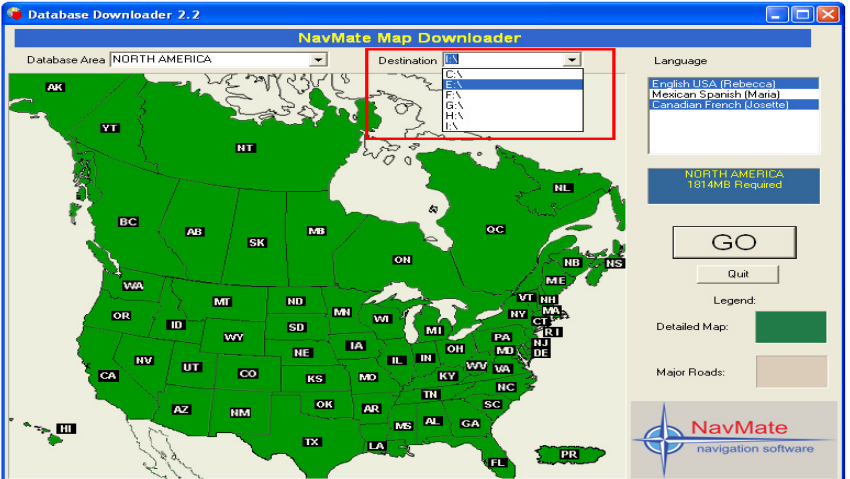
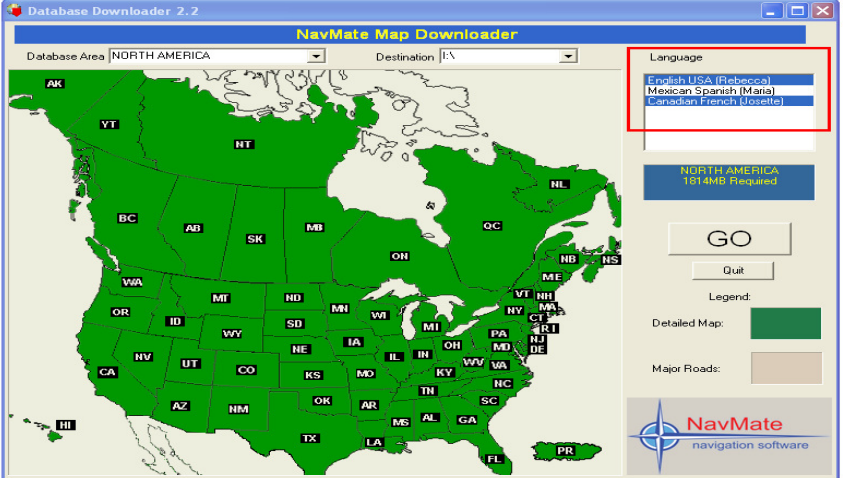
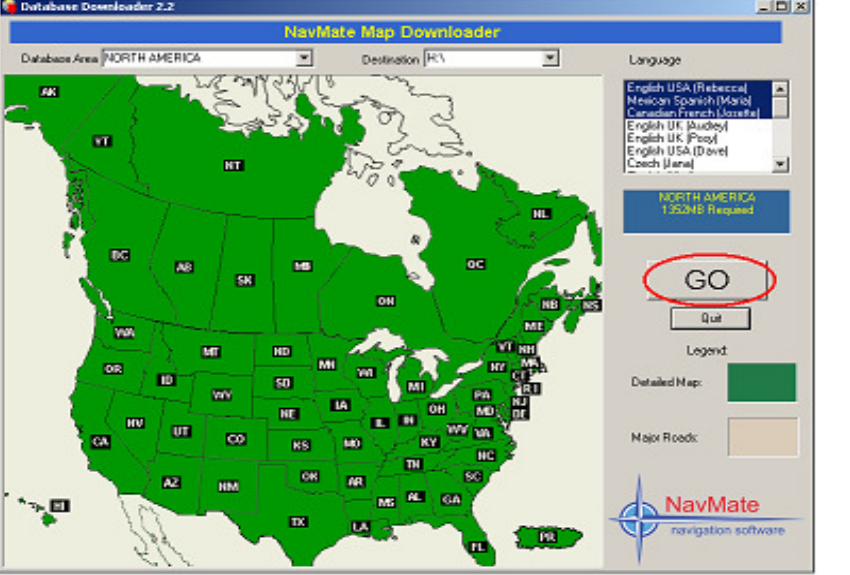
1. Click on the on **Windows Start** button
2. Click on **My Computer**
3. Right click on the Drive letter of the SD card
4. Select **EJECT**. Please wait 30 seconds.
If nothing happens remove the SD card
Please do not just pull the SD card out or the data will be lost.

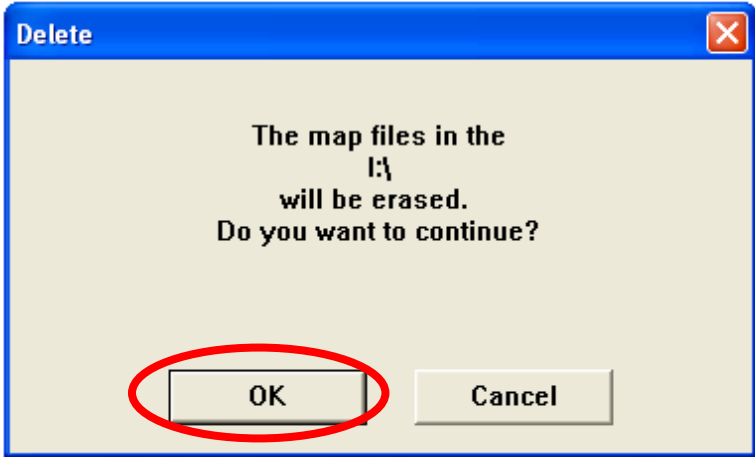


Note: If you have NavMate software currently installed, your existing data like Address Book and My POI will be backed up into a folder called "NavMate" on your PC. After downloading is complete, the backed up data will be restored.

Please make sure you have following components:

- DVD-ROM drive and SD card reader on your computer
- SD card (your navigation memory card)
- Windows computer

	<p>Insert SD card into reader.</p>	
	<p>Please note your drive. After you have this letter Click on Cancel.</p>	
	<p>Insert the DVD into your computer</p>	
	<p>Select "Map/Voice Uploader" option</p>	

<p style="text-align: center; font-size: 2em; font-weight: bold;">4</p>	<p>Select the destination drive of your SD card in “Destination” list.</p>	 <p>The screenshot shows the 'NavMate Map Downloader' window. The 'Destination' dropdown menu is open, showing a list of state abbreviations: CA, EA, FA, GA, HA, IA. A red box highlights this menu. The 'Database Area' is set to 'NORTH AMERICA' and the 'Language' list includes 'English USA (Rebecca)', 'Mexican Spanish (Mario)', and 'Canadian French (Josette)'. A 'GO' button is visible below the language list.</p>
<p style="text-align: center; font-size: 2em; font-weight: bold;">5</p>	<p>Select the desired guidance voice(s) from “Language” list. You may select more than one to load.</p>	 <p>The screenshot shows the 'NavMate Map Downloader' window. The 'Language' list is expanded, showing multiple voices selected: 'English USA (Rebecca)', 'Mexican Spanish (Mario)', and 'Canadian French (Josette)'. A red box highlights the language list. The 'Destination' dropdown is now set to 'IA'. The 'GO' button is visible below the language list.</p>
<p style="text-align: center; font-size: 2em; font-weight: bold;">6</p>	<p>Select “GO” to start download. When “Do you want to continue?” message appears, select “OK”.</p>	 <p>The screenshot shows the 'NavMate Map Downloader' window. The 'GO' button is circled in red. The 'Language' list is still expanded. The 'Destination' dropdown is set to 'IA'. The 'GO' button is located below the language list.</p>

<p>7</p>	<p>Now a Delete window will pop up. Click OK The Software will now load your SD card with new maps and software.</p> <p>This can take 30 to 45 minutes.</p>	
<p>8</p>	<p>Select "OK" to exit program.</p>	
<p>9</p>	<p>Eject SD card properly by doing the following:</p> 	<ul style="list-style-type: none"> • select My Computer • right click on the Drive letter of the SD card • select "Eject"