

NavMate Reload SD Memory Card Devices

Windows only

Please make sure you have following:

- SD card (your navigation memory card)
- Windows only
- SD card reader
- Win Zip <http://www.winzip.com/downse.htm> <free copy>
-

Please Download the file from Valor sight. Then Unzip <extract> them to a Folder in a know location on your computer.

NavMate Installation Instructions for SD cards:

- Step 1. Place the SD card from your Navigation system into your Computer. Please note the Drive letter assigned to the SD card. < D,E,F>
- Step 2. Go to My Computer and Right Click on SD card
- Step 3. Select **Format**
Format Removable Disk (E,D,F) will come up
- Step 4. Select **FAT32** on the File system
- Step 5. Select **Start**
A Warning will pop up
- Step 6. Click **OK** You want to erase ALL the data.
- Step 7. A Format Complete window will appear when it is done.
- Step 8. Click **Ok**
- Step 9. Now you will Exit all windows
- Step 10. Open the folder when you unzipped <extracted> the files.
- Step 11. Now copy this files and folder as is to the SD card.

This takes 30 to 45 minutes.

Now see SD card removal.

SD card Removal:

- Step 1. Click on the on **Windows Start** button
- Step 2. Click on **My Computer**
- Step 3. Right click on the Drive letter of the SD card
- Step 4. Select **EJECT**. Please wait 30 seconds. If nothing happens remove the SD card
Please do not just pull the SD card out or the data will be lost.

Take the SD card out and place it into the 606W unit.

Run the navigation program